


# **CHILDREN'S ELECTRIC TOY BEACHCAR**

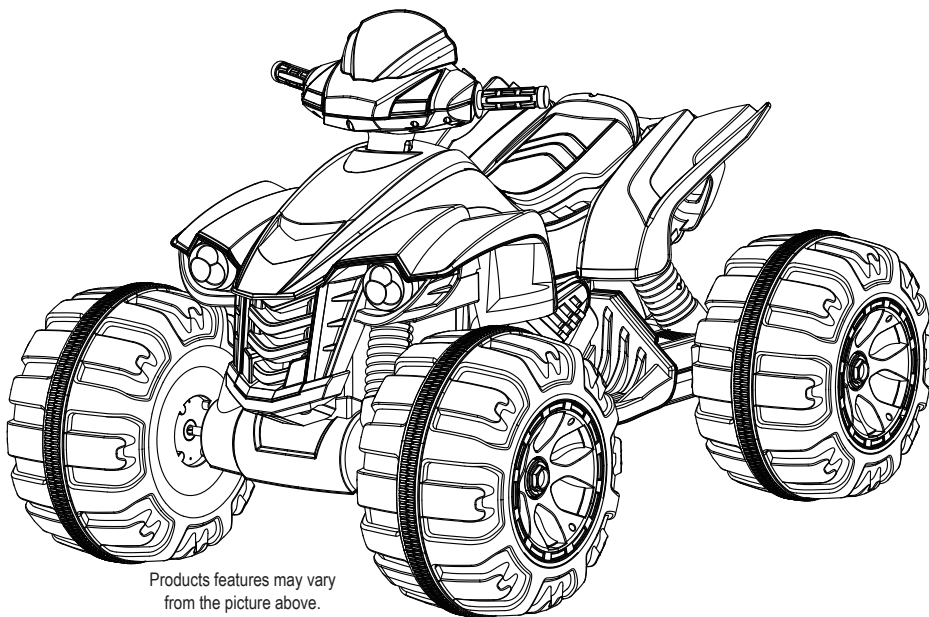

Products features may vary  
from the picture above.

- Suitable for 37~96 Months
- Maximum user weight: 30kg
- Adult assembly required

## **OWNER'S MANUAL** with Assembly Instructions

**Read and understand this entire manual before using!**

Please keep this manual for future reference as it contains important information.

Before first time use, charge the battery for at least 4-6 hours.

# CAUTION



## WARNING

**CHOKING HAZARD** - Small parts.  
Not suitable for children under 36 months.



Use the vehicle on generally level ground **ONLY!**



## WARNING!

**FOR THE SAFETY OF YOUR CHILD, PLEASE READ ALL WARNINGS AND ASSEMBLY/USE INSTRUCTIONS. KEEP THIS GUIDE FOR FUTURE REFERENCE.**

- **ADULT ASSEMBLY REQUIRED.** The product contains small parts, which are for adult assembly only. Keep children away when assembling.
- Always remove protective material and poly bags and dispose before assembly.

## ABOUT YOUR NEW VEHICLE

Thank you for your purchasing our products, we wants your child to enjoy this product for years to come. Keep these points in mind as you read this guide:


Battery:	12V7AH x1 or 12V10AH x1		
Load Capacity:	Under 30kg	Size of car:	120 x 82 x 77 CM
Suitable age:	37~96 months	Speed:	3~5 KM/H
Average battery life:	Approximately 300 times	Charger:	Input: depend on local voltage Output: DC12V1A
Charge time:	8-12 Hours	Power way:	Charging type

# PARTS LIST

PART NO.	PART NAME	Q'ty (pcs)	REMARKS
1	Handle bar	1	
2	Vehicle body	1	
3	Front axle assembly	1	
4	Seat	1	
5	M5x45 machine screw	1	Placed on the steering wheel
6	Ø5 nut	1	Placed on the steering wheel
7	Ø12 washer	4	Placed on the front axle
8	Steering column	1	
9	Front wheel	2	
10	Rear wheel	2	
11	Ø10 locknut	4	2 pcs placed on the front axle, 2 pcs placed on the rear axle.
12	Rear axle	1	
13	Charger	1	
14	Ø18 washer	2	Placed on the rear axle

Assembly package			
A	Ø4x12 screw	9	1 pcs for SPARE
B	M5x12 machine screw	1	
C	Split pin	2	1 pcs for SPARE
D	Hubcap	4	
E	Bushing	2	
F	Spanner	2	
7	Ø12 Washer	3	1 pcs for SPARE

# PARTS DIAGRAM

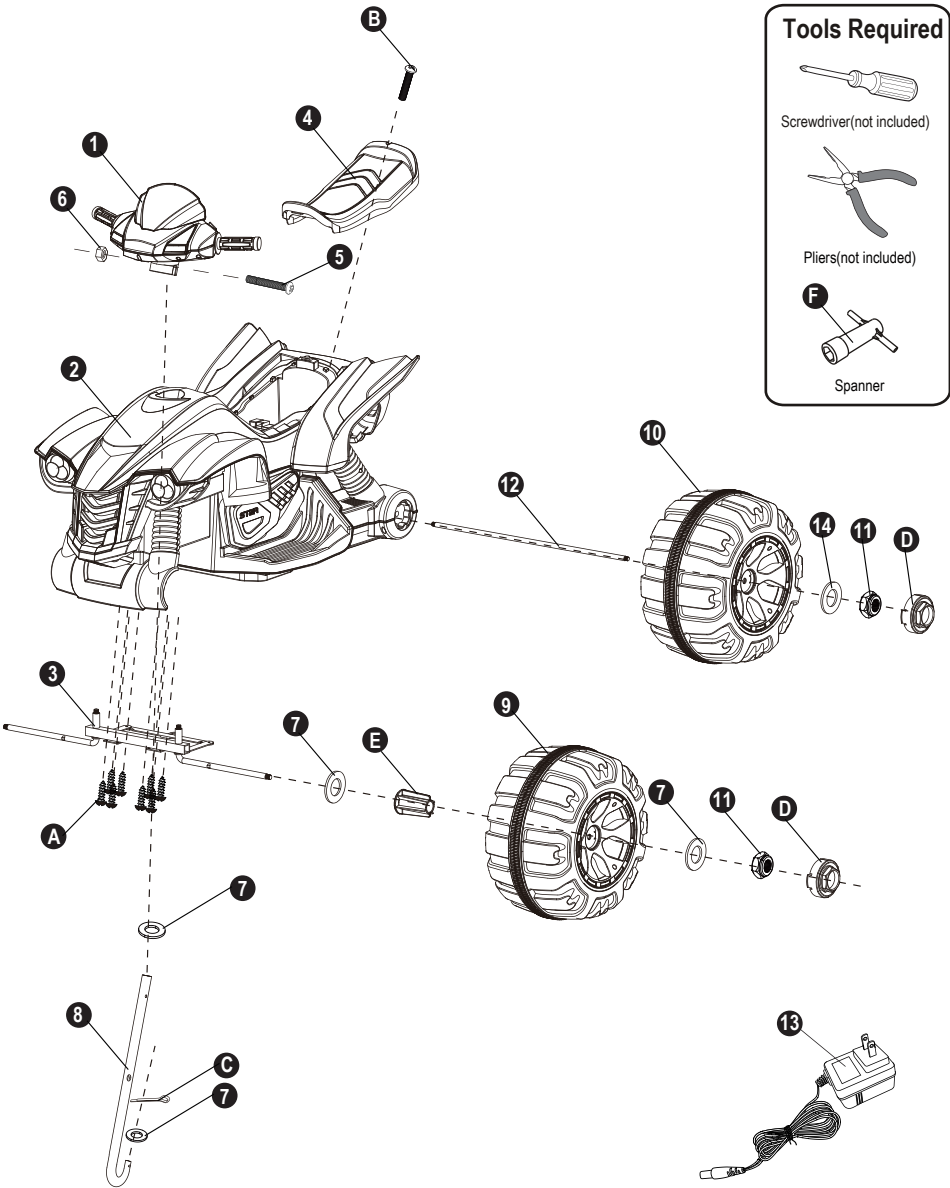


**NOTE:** Some parts shown are assembled  
on both sides of vehicle




# ASSEMBLY STEPS

- **Your new vehicle requires adult assembly.** Please set aside at least 40 minutes for assembly. Children can be harmed by small parts, sharp edges and sharp points in the vehicle's unassembled state. Care should be taken in unpacking and assembly of the vehicle. Children should not handle parts, or help in assembly of the vehicle.
- Please identify all parts before assembly and save all packaging material until assembly is complete to ensure that no parts are discarded.
- Assembly tool for need: screwdriver(provide for oneself) and spanner.

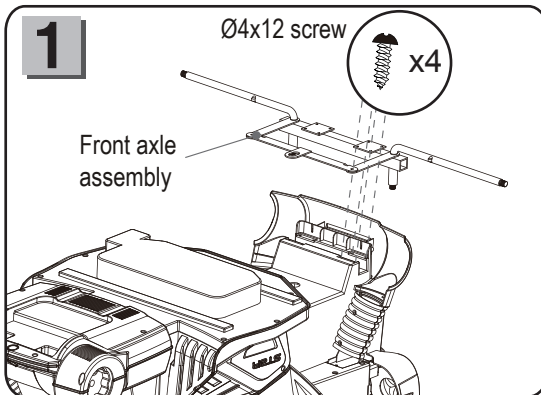


- Turn the vehicle body upside down.
- Fit the front axle assembly to the vehicle body. And tighten four  $\varnothing 4 \times 12$  screws each side to secure it with a screwdriver.

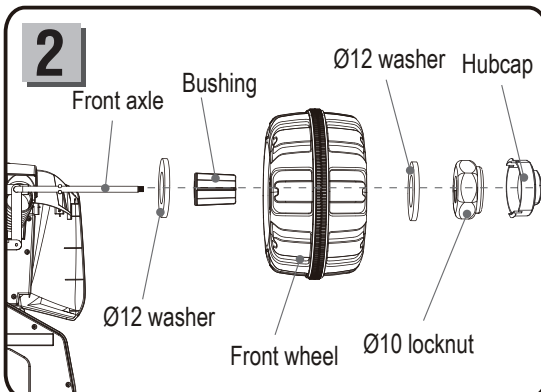


- Remove all the parts from the front axle.
- Fit a  $\varnothing 12$  washer onto the front axle.
- Fit a front wheel onto the front axle.
- Fit a  $\varnothing 12$  washer onto the front axle.
- Fit a  $\varnothing 10$  locknut to the end of the front axle. And tighten with a spanner, DO NOT over-tighten.
- Repeat this procedure to assemble the other front wheel.


# ASSEMBLY STEPS

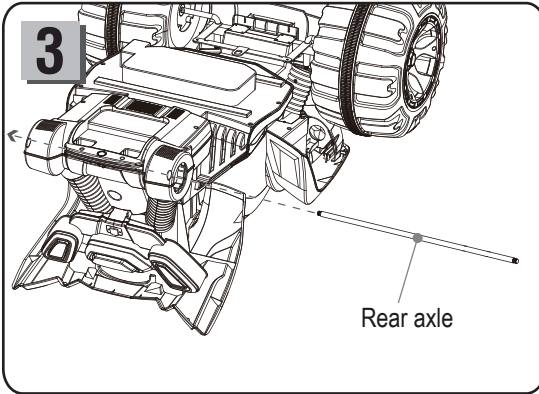

- Remove all the parts from the rear axle.
- Insert the rear axle through the hole in the rear of the vehicle body.

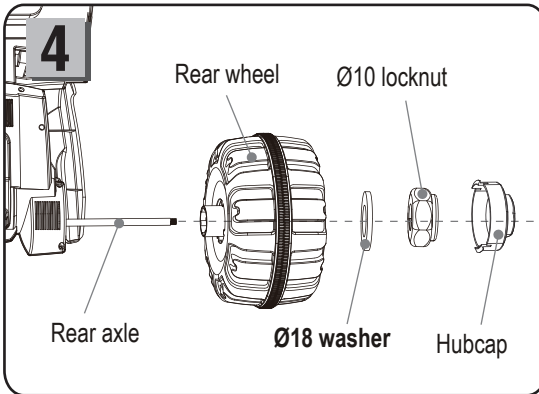

- Fit the driving wheel onto the rear axle. Make it match with the gear box.
- Fit a **Ø18 washer** onto the rear axle.
- Fit a Ø10 locknut to the end of the rear axle.
- Repeat this procedure to assemble the other rear wheel to rear axle.
- Tighten the locknuts on both sides of rear axle with two spanners. **DO NOT** over-tighten.
- Fit the hubcaps.
- Repeat this procedure to assemble the other front wheel.

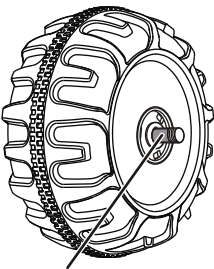


**GAP**


## IMPORTANT SUPPLEMENT TO INSTRUCTION MANUAL

After assembling any wheel to the axles, please check the gap between the screw thread and the collapsible (refer to below picture), if the gap is too big, please add two or three washers inside the wheel, But after tightening the nut outside the wheel, please turn the wheel by your finger to check if the wheel can run smoothly, this is very important, because if the wheel can run smoothly, it is ok, but if the nut press the wheel and the wheel can't run smoothly, the motor will be broken easily! Then you need to decrease one or two washers to make sure the wheel can run smoothly!

# ASSEMBLY STEPS

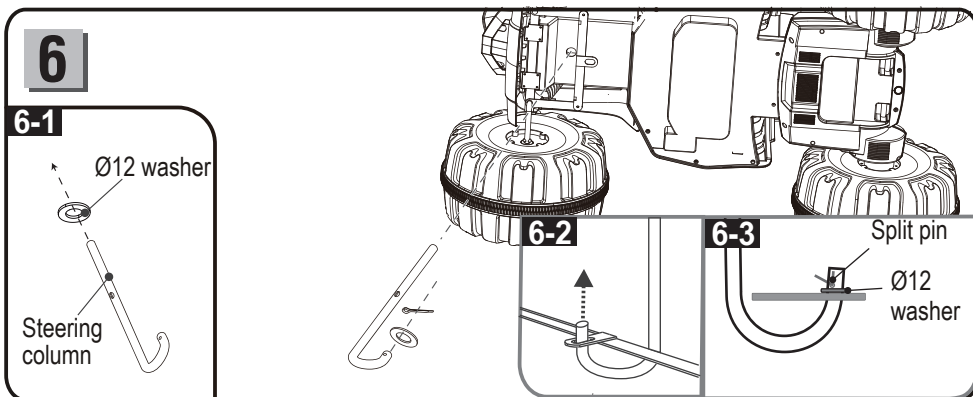

- Turn the vehicle on its side.
- Slide a Ø12 washer onto the steering column from the straight end (PIC6-1).
- Insert the straight end of steering column through the opening in the vehicle body.
- Insert the bent end into the hole in the steering linkage, secure it with a split pin and a Ø12 washer (PIC6-2,6-3)

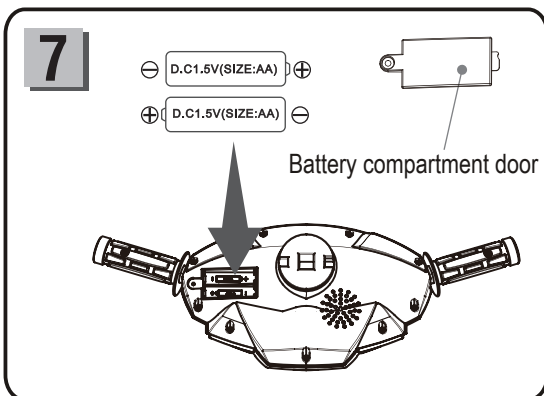

- Remove the screw in the battery compartment door on the back of the handle bar with a screwdriver and lift to open.
- Insert two “AA” (LR6) alkaline batteries into the handle bar.
- Replace the battery compartment door.


Batteries not included.

# ASSEMBLY STEPS



## BATTERY INFORMATION


- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

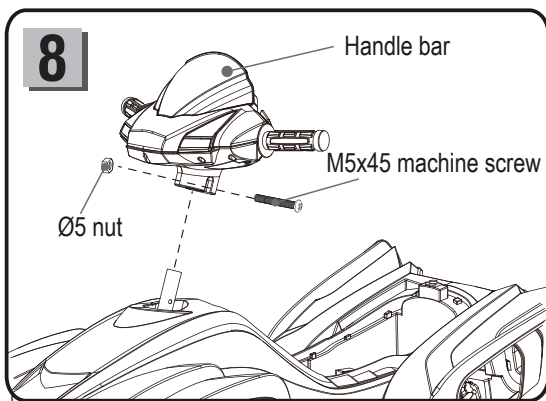

- Turn the vehicle body upright.
- Remove the M5x45 machine screw and Ø5 nut from the handle bar.
- Insert the handle bar to the end of the steering shaft. Line up the holes in the handle bar with the hole in the steering shaft. Tighten the M5x45 machine screw and Ø5 nut back in the same location with a screwdriver.


# ASSEMBLY STEPS

**12V7AH** battery follow this procedure.

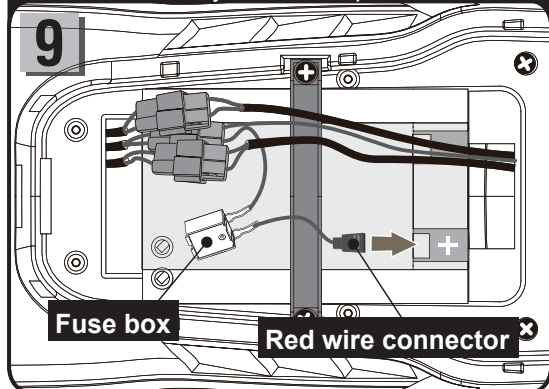


- Locate the red wire connector and plug it into the terminal on battery.

**12V10AH** battery follow this procedure.

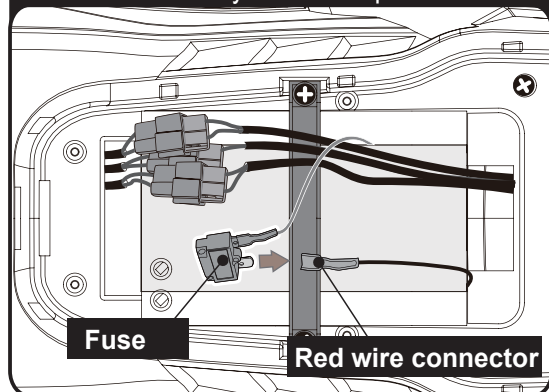

- Locate the red wire connector and plug it into the terminal on the fuse.

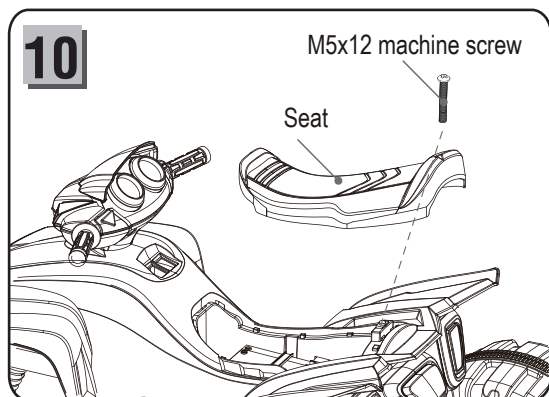

- Insert the tabs on the seat into the slots in the vehicle body, and tighten a M5x12 machine screw to secure it with a screwdriver.

# HOW TO OPERATE YOUR VEHICLE



## WARNING!

### **PREVENT INJURIES AND DEATHS:**

#### **• NEVER LEAVE CHILD UNATTENDED. DIRECT ADULT SUPERVISION IS REQUIRED.**

Always keep child in view when child is in vehicle.

- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Protective equipment should be worn.
- Never use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water.
- Always wear shoes.
- Always sit on the seat.
- Not to be used in traffic.
- This toy is unsuitable for children under 36 months due to its maximum speed; Maximum user weight is 30 kgs.
- This toy has no brake.

### **Must confirm before using that following work which is already finished:**

- **Important!** Before using the vehicle for the first time, the battery needs to be charged for 4 to 6 hours, no more than 10 hours. Only an adult can charge and recharge the battery.
- Check all the screws, cap nuts and protective coverings regularly and tighten as required. Check plastic parts on a regular basis for cracks or broken pieces.


### **Rules for Safe Riding**

**READ THESE RULES ALOUD TO YOUR CHILD AND THEIR PLAYMATES AND MAKE SURE THEY UNDERSTAND THEM!**

- Keep Children within Safe Riding Areas:
  - Never use in roadway, near motor vehicles, on lawn space, on or near steep inclines or steps, swimming pools or other bodies of water;
- Use the toy only on flat surfaces. Such as inside your house, garden or playground.
- Never use in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-lit area.
- It is not recommended to drive the vehicle on wet surfaces or on lopes of greater than 15 degrees.
- Do not use this vehicle outdoors when it is raining or snowing.
- Make sure you come to a complete stop before changing directions from forward to back.
- Please follow the correct weight and age limits allowed to drive this vehicle.
- It is prohibited to change the circuit or add other electric parts
- Inspect wires and connections of the vehicle periodically.
- In order to avoid accidents, please ensure the vehicle is safe before riding.
- Do not let any child touch the wheels or be near them when the car is moving .

# HOW TO OPERATE YOUR VEHICLE

## Use Operation

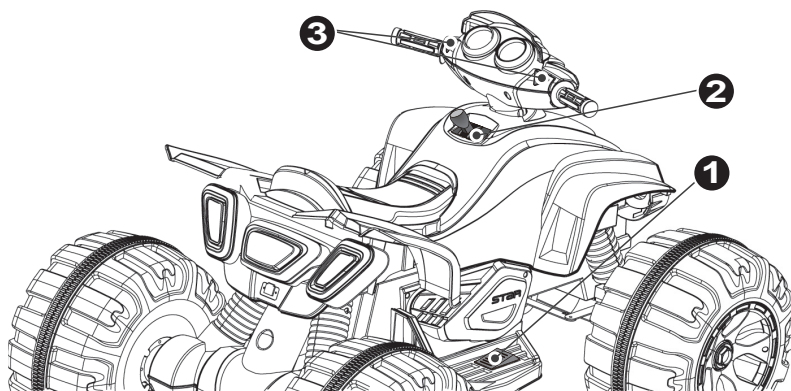

1. **Foot pedal:** Applies power (speed) to the vehicle.
    - To move the car, press the pedal down.
    - To brake or slow down, release pressure from the pedal.
  2. **Forward/reverse switch:** Changes the direction that vehicle moves from forward to reverse.
    - To move the car forward, rock the switch to “forward” position.
    - To move the car backward, rock the switch to “reverse” position.
- HINT: The vehicle is designed to operate in low speed only in reverse.**
3. **Sounds buttons (IF EQUIPPED):** Press for sounds playing.

### IMPORTANT!

Always stop vehicle when changing the speed or direction to avoid damage the gears and motor.



### ADVANCED USE - High speed Drive

Make sure your child knows how to steer, how to start and stop the vehicle and knows the rules for safe driving. The vehicle can be driven at a maximum of 3~5 km/h.

# CHARGING YOUR VEHICLE

**ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!**


## **WARNING!**

### • **PREVENT FIRE AND ELECTRIC SHOCK:**

- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
  - Do not use the battery or charger for any other product. Overheating, fire or explosion could occur.
  - NEVER modify the electric circuit system. Tampering with the electric system may cause a shock, fire or explosion or may permanently damage the system.
  - Do not allow direct contact between battery terminals. Fire or explosion can occur.
  - Do not allow any type of liquid on the battery or its components.
  - Explosive gasses are created during charging. Do not charge near heat or flammable materials. Charge the battery in a well-ventilated area ONLY.
  - NEVER pick up the battery by the wires or charger. Damage can occur to the battery and may cause a fire. Pick up the battery by the case ONLY.
  - Charge the battery in a dry area ONLY.
  - Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**
  - Do not open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
  - Do not open the charger. Exposed wiring and circuitry inside case may cause electric shock. Only adults may handle or charge the battery. NEVER allow child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
  - Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
  - Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. DO NOT charge the battery if any damage to parts has occurred.
  - Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
  - Do not charge battery upside down.
  - Always secure the battery with the bracket. Battery can fall out and injure a child if vehicle tips over.
- 
- The charging input socket is UNDER THE SEAT.
  - The **POWER SWITCH** must be turned in **OFF** position when charging.
  - Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
  - When the vehicle begins to run slowly, recharge the battery.
  - After each use or once a month minimum recharge time as 8 to 12 hours, less than 20 hours at most.



# CHARGING YOUR VEHICLE

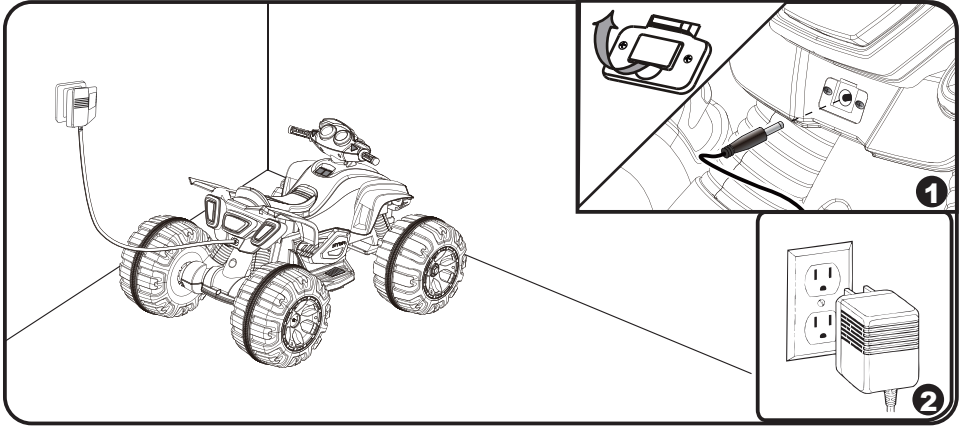

1. Open the cover of the socket (the socket is under the taillight), plug the charger port into the input socket.
3. Plug the charger plug into a wall outlet. The battery will begin charging.



## WARNING!

This product with CHARGING PROTECTION: When charging, all the functions will be cut off!

# TROUBLESHOOTING GUIDE

---

## ■ PROBLEM: The vehicle does not run

### **PROBLEM CAUSE: The battery may low on power.**

After each use, or once a month minimum, charge the battery for a full 10 hours. Do not leave the battery on the charger for more than 20 hours.

### **POSSIBLE CAUSE: Thermal fuse has tripped.**

The vehicle is equipped with a self-resetting fuse. When the vehicle is overloaded or operated incorrectly; the self-resetting fuse will be cut off for 5-20seconds before becoming operational again. The self-resetting fuse is under the seat (Refer to the picture.)

### **To avoid the fuse cut off the power, follow these guidelines:**

DO NOT overload the vehicle, Maximum weight allowed :30kg

DO NOT tow anything behind the vehicle.

DO NOT drive up steep slopes.

DO NOT drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.

DO NOT drive in very hot weather, components may overheat.

DO NOT tamper with the electric system, Doing so may create a short circuit, causing the fuse to trip.

### **POSSIBLE CAUSE: Wheel nuts are loose.**

If the nuts are not tight, the wheels will not engage the forward gears. Tighten the nut with the nut wrench.

### **POSSIBLE CAUSE: Battery connector or wires are loose.**

Make Sure the battery connectors are firmly plugged in to each other.

### **POSSIBLE CAUSE: Battery is dead.**

Have you properly maintained the battery according to the directions? Is the battery old? Your battery may need to be replaced.

### **POSSIBLE CAUSE: Electric system is damaged.**

Water may have corroded the system, or loose dirt, gravel or sand might have jammed the switch.

### **POSSIBLE CAUSE: Motor is damaged.**

The motor needs professional repair.

## ■ PROBLEM: The battery will not recharge.

### **POSSIBLE CAUSE: Battery connector or adapter connector is loose.**

Make sure the battery connector and adapter connector are firmly plugged together.

### **POSSIBLE CAUSE: Charger is not plugged in.**

Make sure the charger is plugged into the wall outlet and the power flow to the outlet is on.

### **POSSIBLE CAUSE: Charger is not working.**

Is the charger warm while charging? If not, the charger may be broken and may need to be replaced.

# TROUBLESHOOTING GUIDE

---

## ■ PROBLEM: The vehicle does not run very long.

### **POSSIBLE CAUSE: Battery may be undercharged.**

You may not be charging the battery long enough. After each use, or once a month minimum, charge the battery for 8 to 10 hours. Do not leave the battery on the charger for more than 20 hours.

### **POSSIBLE CAUSE: Battery is old.**

The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years. Replace the battery with a new one.

## ■ PROBLEM: Battery buzzes or gurgles when charging.

This is normal and not a cause for concern. It may also be silent when charging, which is also normal.

## ■ PROBLEM: Charger feels warm when recharging battery.

This is normal and not a cause for concern.

# MAINTAINING YOUR VEHICLE

---

- It is parents' responsibility to check main parts of the toy before using. Must regularly examine for potential hazard, such as the battery, charge cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

# DISPOSAL OF BATTERY

---

## Disposal Of Battery



- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.
- Return an exhausted battery to your local approved lead-acid battery recycle, such as a local seller of automotive batteries.
- Contact your local waste management officials for other information regarding the environmentally sound recycling and disposal of lead-acid batteries.

Our products are suitable for  
ASTM F963; GB6675; EN71 and EN62115 standard.